



WHEEL TORQUE

All alloy wheels should be installed using a torque wrench. This ensures that the wheels are not too tight or too loose. Check your vehicle's manual for correct settings. When you install wheels for the first time, you should re-torque wheels after about 100km to 150km (60 to 90 miles).